


Kitchen Pod Assembly Instructions

Tools you will need:

- 1- Drill & screwdriver attachment
- 2- Small drill bit for piloting holes
- 3- Rubber Mallet / hammer and wooden block for assembly (units with T Trim Only)

We recommend piloting screw holes to reduce the risk of MDF splitting and using either a rubber mallet or hammer and small block of wood to knock the parts together.

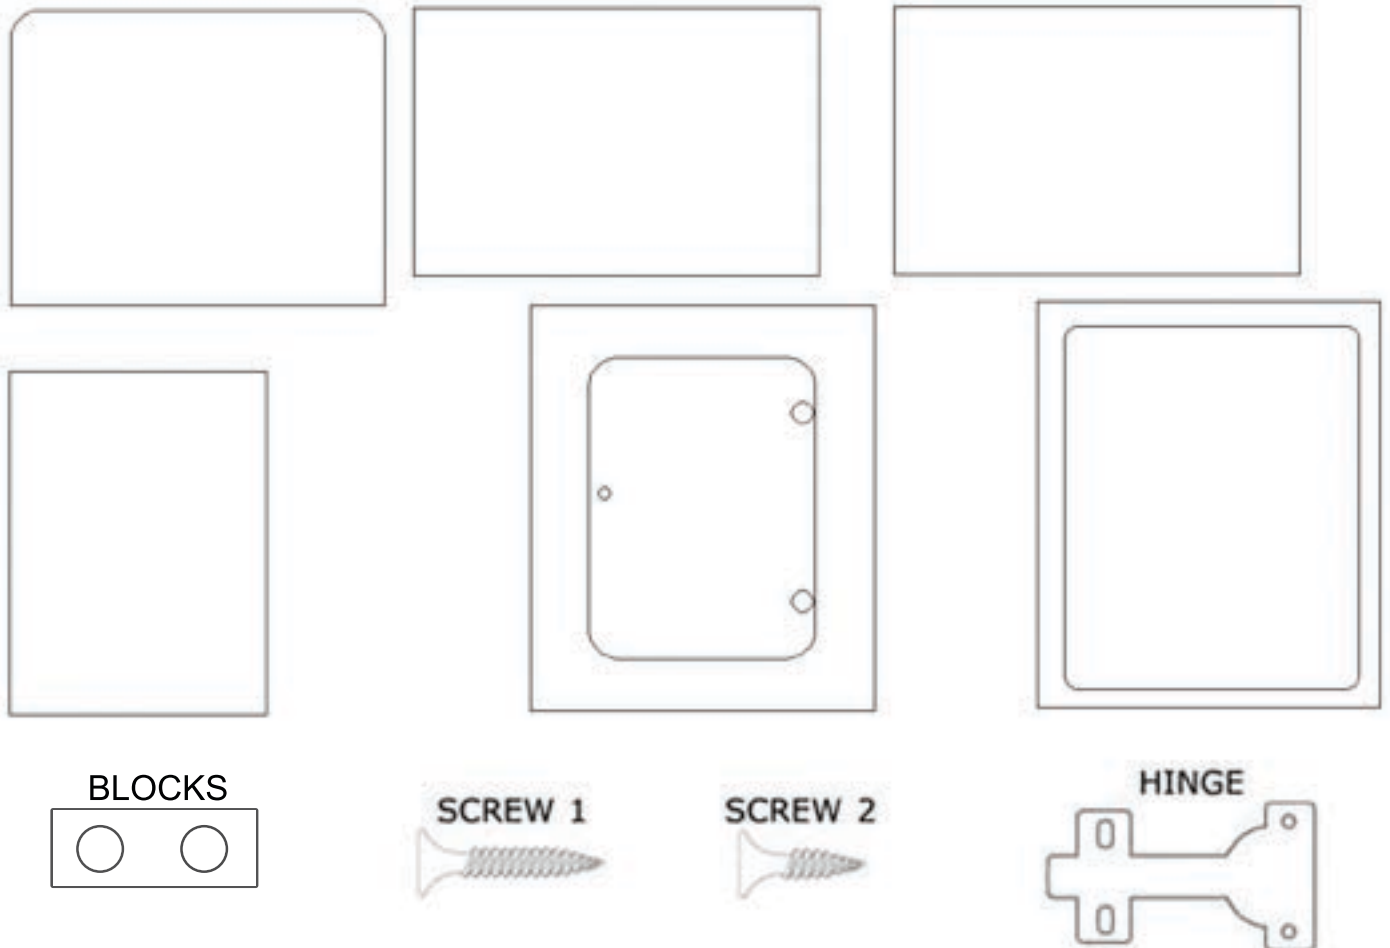

Fasten blocks to sides and top & bottom of front & rear panel and top and bottom of side panels, using screw 1.

Fit hinges to door and fix door to front panel using screw 2

Fasten worktop to sides front and rear using blocks & screw 1

Your unit is assembled