


Kitchen Pod Assembly Instructions

Tools you will need:

- 1- Drill & screwdriver attachment
- 2- Small drill bit for piloting holes
- 3- Rubber Mallet / hammer and wooden block for assembly (units with T Trim Only)

We recommend piloting screw holes to reduce the risk of MDF splitting and using either a rubber mallet or hammer and small block of wood to knock the parts together.

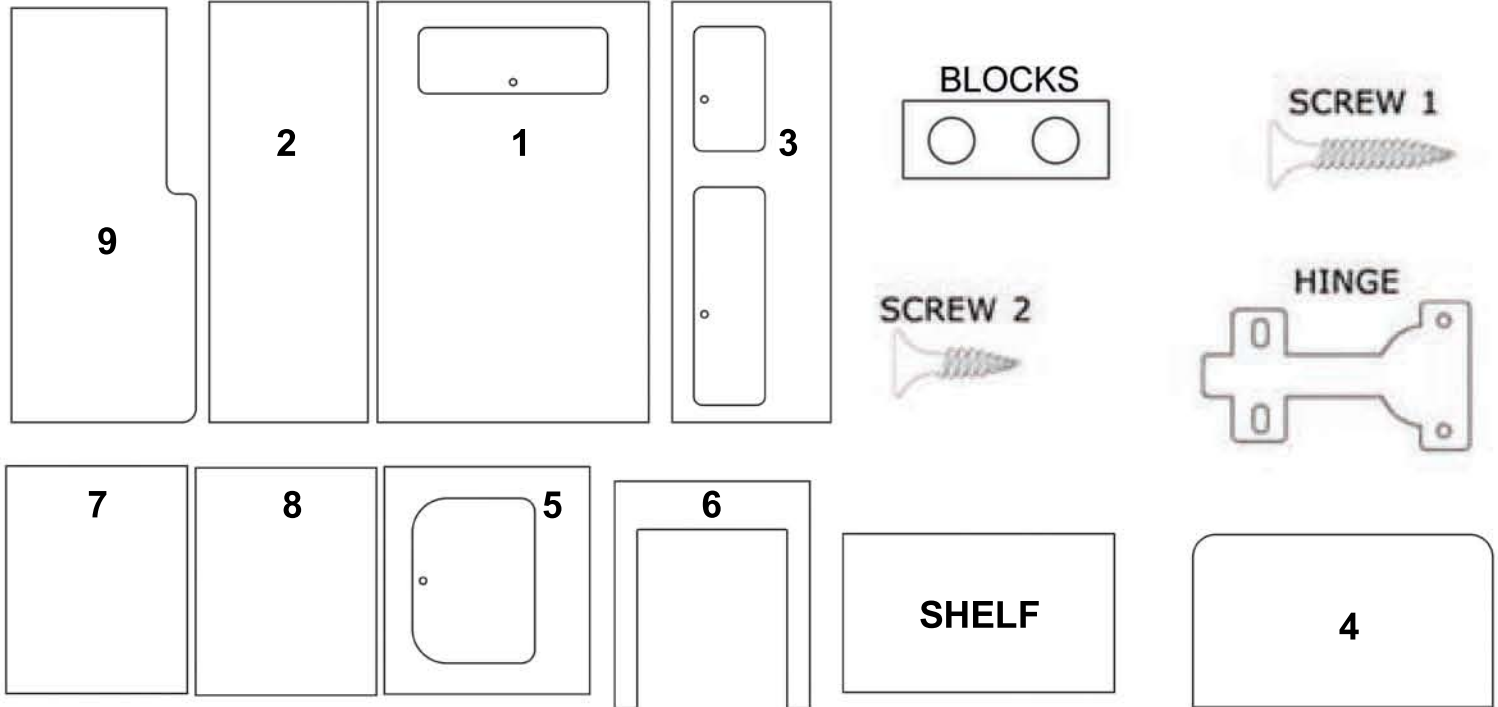

ASCERTAIN WHETHER SIDES NEED TO BE SCRIBED TO VAN

SCRIBE SIDES AS REQUIRED WE RECOMMEND DOING THIS A SMALL AMOUNT AT A TIME TO AVOID OVER CUTTING THE PANELS

ASSEMBLY

STEP 1 ASSEMBLE WARDROBE

- FASTEN BLOCKS TO SIDE AND TOP EDGES OF PART 1
- FASTEN BLOCKS TO TOP EDGES OF PARTS 2 & 3
- FASTEN PART 1 TO PARTS 2 & 3 USING BLOCKS FITTED
- FASTEN PART 4 TO PARTS 1, 2 & 3 USING BLOCKS FITTED

FIT DOORS WITH HINGES PROVIDED

FIT SHELF WHERE REQUIRED

STEP 2 ASSEMBLE WORKTOP UNIT

- FASTEN BLOCKS TO SIDES AND TOP EDGES OF PARTS 5 & 6
- FASTEN BLOCKS TO TOP EDGES OF PARTS 7 & 8
- FASTEN PART 5 & 6 TO PARTS 7 & 8 USING BLOCKS FITTED
- FASTEN PARTIALLY ASSEMBLED BASE TO TO PARTS 9 USING BLOCKS FITTED

FIT DOORS WITH HINGES PROVIDED

FIT TO VAN